

## SY011I Loadcell Amplifier

## **Operating Information**

SY011I amplifiers are supplied set up as detailed below unless special instructions are stated on the order. The span and zero presets should not be adjusted unless accurate calibration facilities are available. If the amplifier is supplied with a single loadcell a System Certificate is supplied giving the amplifier output at each loadcell calibration point.

Supply voltage	Recommended	24.0V
	Maximum	30.0V
	Minimum	17.0V
	Current limit	<1.0A
Standard output	Zero load	4.0mA
	Full load	20.0mA
Bi-directional output	Tension full load	4.0mA
	Zero load	12mA
	Compression full load	20.0mA
Maximum loop resistance	24V supply	400Ω
Calibration configuration	24V supply	250 $\Omega$ loop resistance
Non-linearity - Typical		±0.05% of full range
	Option Code	
Excitation voltage - Nominal		5.0V 10.0V
Maximum excitation current		15mA 30mA
Operating temperature range		0 to 50°C

## Connections

Terminal	Loadcell Cable	Terminal	Function
Ex-	Blue & orange	Gnd	Supply 0V & output low
Sig+	Yellow	O/P	Output high
Sig-	Green	V+	+ Supply
Ex+	Red		

Sig+ and Sig- colours are shown for a positive output in compression, if a positive output is required in tension reverse the yellow and green wires.

Use good quality screened cable for the output with the screen only earthed at one point. This will usually be at the electronics powering the amplifier.

THE SUPPLY CONNECTIONS MUST NOT BE REVERSED.

DO NOT SHORT CIRCUIT THE AMPLIFIER OUTPUT TO THE POSITIVE SUPPLY TERMINAL.

**(E** This product complies with the requirements of the European EMC directive.

Document number MN0004 Issue 3 Date 22:07:19

## NOVATECH MEASUREMENTS LTD

83 CASTLEHAM ROAD, ST LEONARDS ON SEA, EAST SUSSEX, TN38 9NT, ENGLAND Tel: 01424 852744 email: info@novatechloadcells.co.uk Fax: 01424 853002 www.novatechloadcells.co.uk